

## A1340-C1

Isolation amplifier

DC - 1.7 MHz | 20 V/µs | IMRR > 106 dB | 500 V<sub>AC</sub>,/1 kV<sub>DC</sub>



## **DATA SHEET**

The A1340-C1 is a 3-port isolation amplifier (input, output, USB/network) with optionally selectable input and output potentials.

The A1340-C1 is equipped with an input instrument amplifier with high commonmode suppression. The input gain can be optionally selected between 1, 2, 5, and 10 by means of a push button.

The great small-signal band width from DC to > 1.7 MHz ensures excellent signal reproduction. A slew rate of > 20 V/µs allows for great large-signal band widths.

Through purely analog signal transmission, the output signal is free from cycle and switching signals.

High offset stability is achieved through temperature control of the offset variables.

Automatic offset compensation is possible at any time at the push of a button.

Moreover, the A1340-C1 can be completely remote-controlled via a USB interface (emulated COM port).



### **Features**

- 3-port isolation amplifier (input, output, USB/network) with optionally selectable input and output potentials
- Input instrument amplifier with high-power common-mode suppression and switchable gain of 1, 2, 5 or 10
- Great small-signal band width from DC to > 1.7 MHz
- High slew rate of > 20 V/µs
- Purely analog signal transmission, i.e. no switching signals in the output signal
- Low output noise of < 1 mV<sub>pp</sub>
- High input resistance > 1 MΩ for low source load
- High offset stability achieved through temperature control of the offset variables
- Automatic offset compensation possible at any time at the push of a button
- Full remote control via USB interface (emulated COM port) optional



## **Applications**

- General lab applications for research, development and testing
- Universally applicable in scenarios with required galvanic isolation
- Galvanic isolation for personal protection, e.g. in medical engineering
- Galvanic isolation for safety reasons, e.g. for signal acquisition via computer systems
- Prevention of ripple pickup
- Measurement of small differential signals in high common-mode voltages
- Suppression of common-mode interference
- Actuation for series connection of amplifiers / power supply units
- Injection of interference signals in supply lines without transformer
- Design of automated test fields

#### Rear of the amplifier





## **Specifications**

Parameters	Specification	Conditions/Moments
		25° C ambient temperature
		Continuous operation
		1: Input Gnd
		2: Signal +
Input	3 pole XLR	3: Signal -
•	•	
	1, 2, 5, 10	
Gain (switchable)	(±1 % ±100 ppm/°C)	
Input Voltage Range	± 10 V	
Input voltage hange	± 10 V	
Common mode input range	< ± 13.5 V	
Maximum Input Level	± 35 V	
Input Impedance	1 MΩ	$(2 \rightarrow 1, 3 \rightarrow 1)$
Input Capacity	typ. 120 pF (2 → 3)	
Input Capacity	typ. 90 pF (2 $\rightarrow$ 1, 3 $\rightarrow$ 1)	
Output Voltage Range	± 10 V	
Output Impedance	50 Ω	
Minimum Load	> 1 kΩ	
Output Offset	< ± 1 mV	After Compensation
Output Offset Drift (Temp.)	< ±5 mV/10-50 °C	
Small Signal Frequency		
Response	DC – 1.7 MHz	
Slew Rate	20 V/µSec	
Noise DC - 20 MHz	< 1 mV <sub>pp</sub>	peak - peak
20 Hz – 2 MHz	< 0.20 mV <sub>rms</sub>	Gain 1, Gain 2
	< 0.25 mV <sub>rms</sub>	Gain 5
	< 0.30 mV <sub>rms</sub>	Gain 10
		Gairrio
THD+N	< 0.1%	Sine, 7.07 V <sub>ms</sub> , 100 Hz/100 kHz
Coupling Capacity	< 33 pF	Input - Output
Coupling Capacity	< 42 pF	Input - Case
Coupling Capacity	< 52 pE	
Coupling Capacity	< 52 pF	Output - Case
Isolation Mode Rejection Ration	0	
(IMRR)	> 106 dB @ 55 Hz/7,07 V <sub>rms</sub>	Input 1+2+3 $\rightarrow$ Output Gnd.



Parameters	Specification	Conditions/Moments
Common Mode Rejection	Gain 1:	
Ration (CMRR)	90 dB typ. / 80 dB min.	Input 2+3 → 1; 55 Hz/7.07 V <sub>rms</sub>
	Gain 2:	
	96 dB typ. / 86 dB min.	
	Gain 5:	
	101 dB typ. / 91 dB min. Gain 10:	
	106 dB typ. / 96 dB min.	
		Input – Output
		Input – Case
Insulation Voltage, permanent	500 V AC, 1 kV DC	Output – Case
		60 sec:
		Input – Output
		Input – Case
Insulation Test Voltage	1 kV AC, 2 kV DC	Output – Case
Physical Characteristics		
AC Power	230 VAC / 50 Hz	
Remote control	USB	
Operating Temperature	10 °C to 55 °C	
Humidity	< 80 % at 40 °C	non-condensing
Dimensions (W x H x D)	151 x 80.5 x 300 mm	
Weight	Approx. 2,2 kg	



#### Square Wave 100 kHz Amplitude 10 V


1	3.00V/	2			0.Os	2.00	10\$/ .	Auto	<u></u> <b>f</b> 1	24.5♥
									# E H 51 AC DC	Agilent rfassung :: ohe Aufl. DDMSa/s Kanäle :: 1.00:1 10.0:1 essungen :: 100.00kHz 1): 20.3V

### Square Wave 100 kHz Amplitude 150 mV

1	50°/	2		0.0s	2.000s	/ Auto	<b>£</b> 1 24.4♥
							Agilent Erfassung :: Hohe Aufl. 500MSa/s
⊤► I₽							<u>Kanäle ::</u> AC 1.00:1 DC 10.0:1
			- - - - - -				<u> Messungen</u> Freq.(1): <u>99.98kHz</u> Sp-Sp(1): 305mV
			 + - - - - - - -				Max.(2): Kein Signal




#### Small Signal Frequency Response Gain = 1

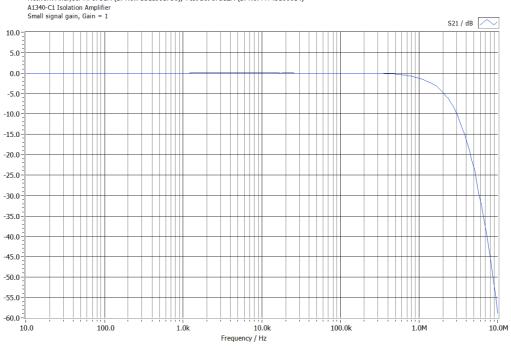


Network Analyser HP8751A (S.-No.: 3315J01756), Test Set 87512A (S.-No. MY43100614) A1340-C1 Isolation Amplifier Small signal gain, Gain = 1

#### Small Signal Frequency Response Gain = 2

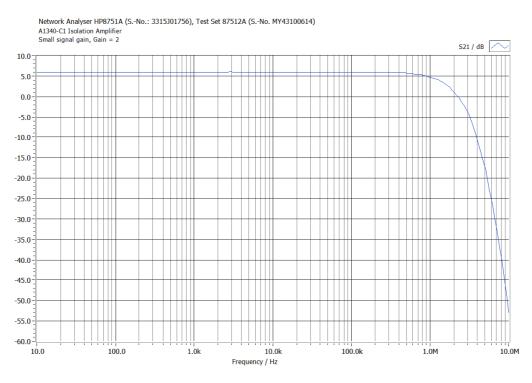




#### Small Signal Frequency Response Gain = 5

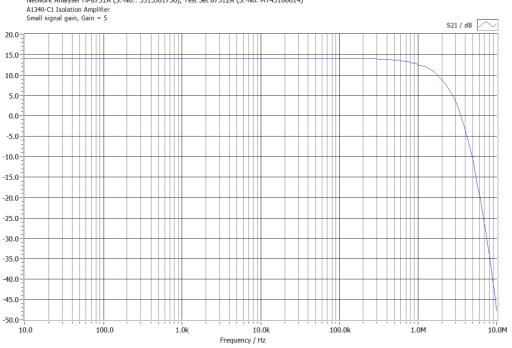


Network Analyser HP8751A (S.-No.: 3315J01756), Test Set 87512A (S.-No. MY43100614)

#### Small Signal Frequency Response Gain = 10

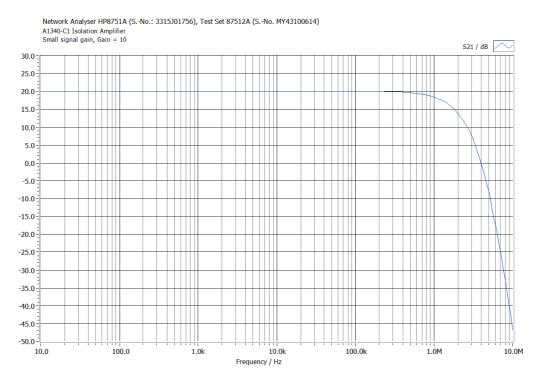




#### Common Mode Rejection Ratio

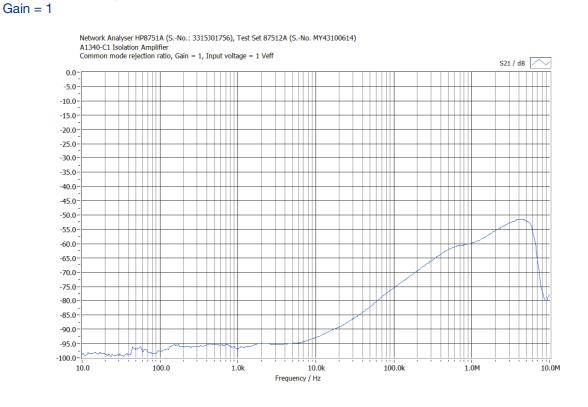


# Common Mode Rejection Ratio Gain = 2

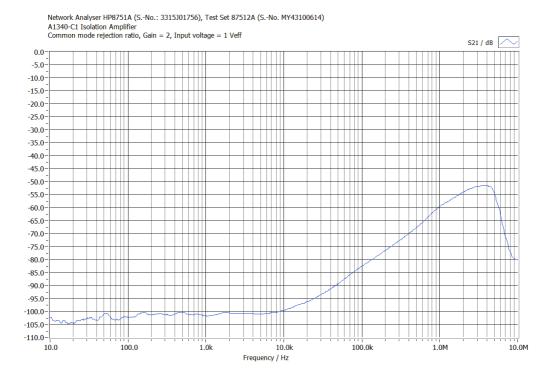




## Common Mode Rejection Ratio

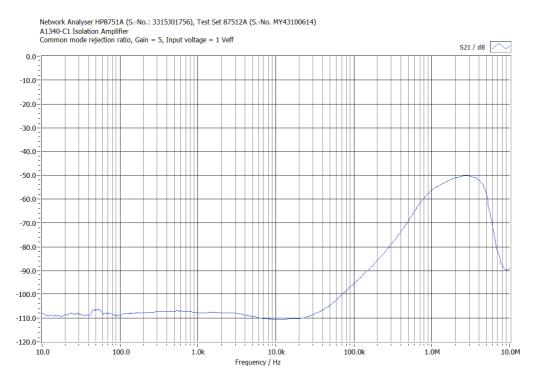


## Common Mode Rejection Ratio Gain = 10

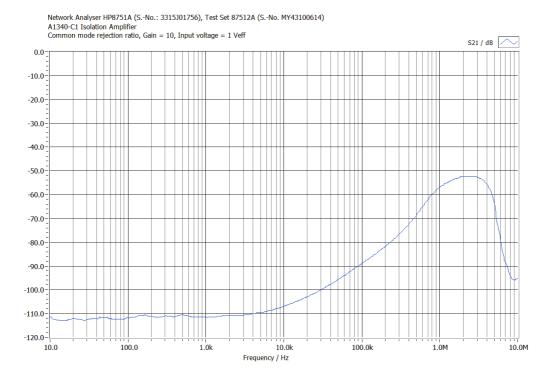




#### Isolation Mode Rejection Ratio

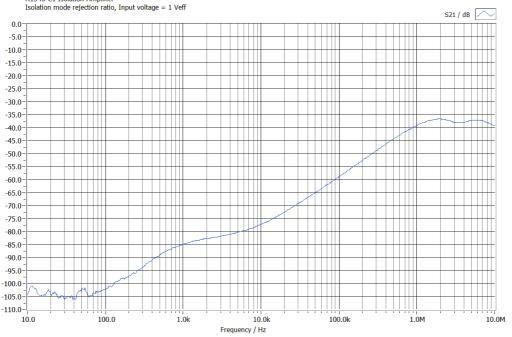

Network Analyser HP8751A (S.-No.: 3315J01756), Test Set 87512A (S.-No. MY43100614) A1340-C1 Isolation Amplifier Isolation mode rejection ratio, Input voltage = 1 Veff



Block diagram A1340-C1

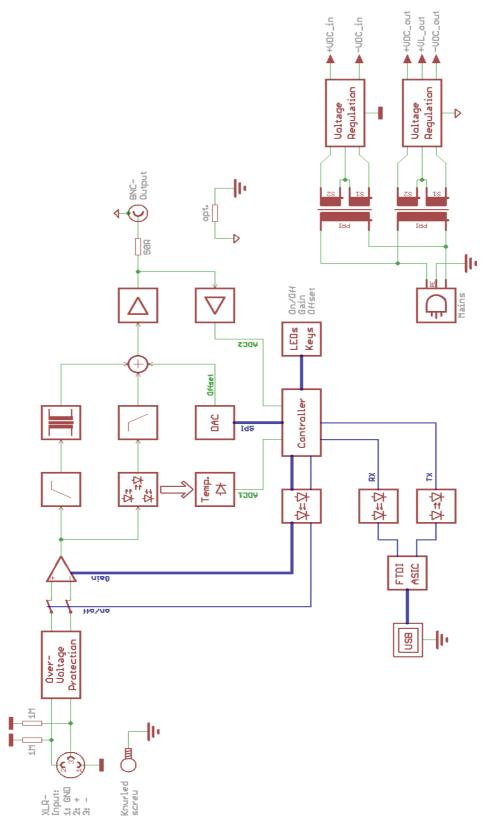



## **Ordering information**

12300010

A1340-C1; isolation amplifier



Dr. Hubert GmbH Universitätsstraße 142 44799 BOCHUM GERMANY Tel. +49 234 970569-0 Fax. +49 234 970569-29 sales@drhubert.de www.drhubert.de

DS\_A1340-C1(1\_0).odt / 11/14